
10×10 Two-Boy Room Layout

Map out a highly functional shared bedroom with distinct personal zones.

Give each boy his own customized territory without chopping up a small footprint. This spatial guide helps you eliminate clutter and restore peace before moving heavy furniture.

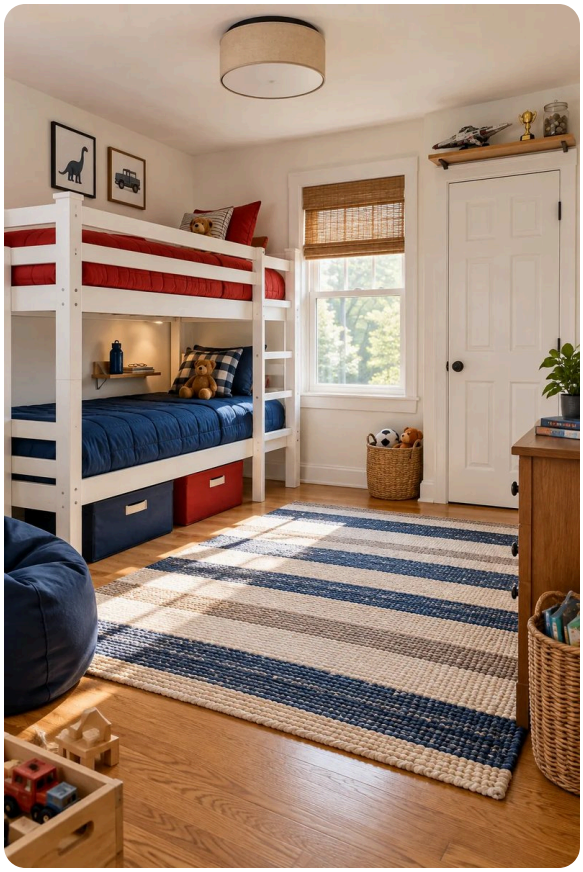

Key Clearances

10×10 ft
Maximum shared room footprint

Min. 3 ft
Walkway in central floor area

Min. 5 in
Rail clearance over low-profile mattress

4 in
Slim wooden ledge per bunk

Puck Light Under Bunk

Stick a battery-powered LED puck light under the bunk slats for an independent reading lamp. Clean wood with rubbing alcohol first to ensure a strong adhesive bond.

Backpack Hook Hardware

Find your row: **Your door type**

Your door type	Your pick	Why
Hollow-core door	Heavy-duty anchors	Secures heavy gear safely
Solid wood core	Drill pilot holes	Prevents wood from splitting
Renting or no-drill	Over-door hook rack	Holds backpacks without damage

Measure Before You Move

- ○ Verify primary bedroom door swing clearance against the bottom bunk frame.
- ○ Confirm total ceiling height allows enough headroom for top bunk sleeper.
- ○ Account for baseboard depth when pushing the bed against back wall.
- ○ Measure remaining central floor area to guarantee the main clear walkway.
- ○ Mark seated shoulder height to mount ledges without accidental night bumps.

Room Placement Checklist

- ☐ Position bunk bed against the longest uninterrupted wall.
- ☐ Color-code by bedding to establish distinct personal territories.
- ☐ Mount solid oak over-door trophy shelf above closet frame.
- ☐ Anchor central rug with heavy-duty, non-slip felt pad.
- ☐ Slide soft canvas storage bins under the bottom bunk.
- ☐ Install a secondary hanging rod lower in the closet.
- ☐ Route charging cables down back leg using adhesive clips.

Clearance Notes & Measurements

Enjoy creating a harmonious space where both boys can thrive and relax!