

# Luxury Bath Clearance & Lighting Guide

Map out your seamless daily spa retreat with precise spatial rules.

Planning a seamless daily spa retreat requires exact measurements. Use these professional clearances to confidently arrange your freestanding tub, custom vanities, and curbless showers.

## ● Professional Spatial Clearances

### 6 in

Ceiling drop for dimmable ambient cove

### 15-amp

Dedicated outlet for in-drawer power strip

### 120V

Separate circuit for heated towel drawer

### 2 in (1/4 in/ft slope)

Subfloor drop for tile-in linear drain

### Min. 8 in

Clearance beneath floating vanity base

### Min. 12 in


Breathing room around freestanding tub

### Min. 30 in

Clear floor space facing the toilet

### Min. 21 in

Clear floor space facing the vanity

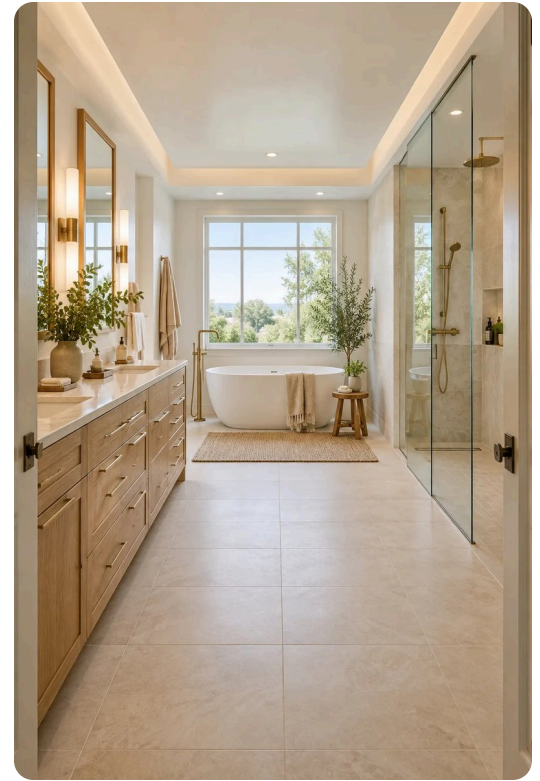

### *Eliminate Harsh Overhead Glare*

*Shift primary ambient lighting to the perimeter cove and add face-level sconces at the vanity to create a flattering, shadow-free environment for your daily prep routines.*

### ● Select Your Brass Finish

Find your row: **Hardware aging preference**

| Hardware aging preference  | Your pick         | Why                                        |
|----------------------------|-------------------|--------------------------------------------|
| Pristine modern minimalist | PVD Brushed Gold  | Low maintenance, wipes clean easily        |
| Traditional living patina  | Unlacquered Brass | Ages organically, protect with mineral oil |
| Maintained factory shine   | Lacquered Brass   | Medium maintenance for high-traffic baths  |

## ● Essential Rough-In Details

- ☐ Specify 2700K LED tape lights for warm, natural illumination.
- ☐ Route articulated cable arm behind drawers to prevent binding.
- ☐ Install solid wood blocking between studs for heavy glass hinges.
- ☐ Apply liquid waterproofing membrane across the entire bathroom footprint.
- ☐ Seal natural wood vanities with marine-grade matte polyurethane.
- ☐ Add a metal-lined canister insert to absorb hot tool heat.

## ● Measure Before You Build

- ☐ Check electrical code distances separating wall outlets from open water.
- ☐ Measure tub filler spout reach against your specific tub's slope.
- ☐ Verify internal cabinet dimensions ensure warming units fit entirely flush.
- ☐ Ensure the swinging shower door clears tub rims and hooks.
- ☐ Verify the glass shower door has a full 24-inch swing.

### ● Bathroom Layout Notes

Enjoy your beautifully organized, clutter-free sanctuary that feels effortlessly luxurious every single day.