
Shower Tile Layout & Budget

Plan a high-end bathroom renovation without overspending.

Calculate exact tile quantities and plan your design step by step. Use these layout checks and material lists to keep your renovation on track.

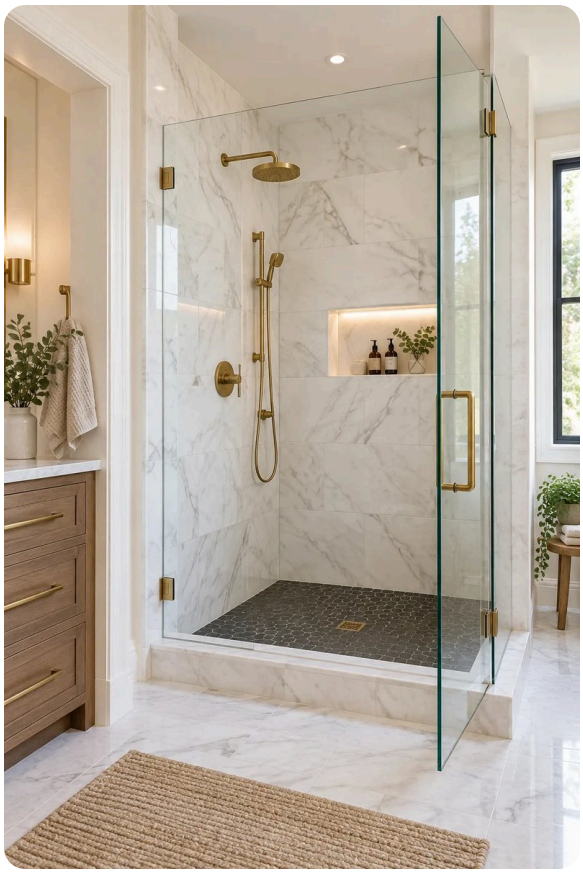

Key Tile Specs

24x48 in
Large-format porcelain wall tile size

1/3
Offset to keep massive tiles flat

2 in
Matte mosaic allows proper drain slope

15 %
Standard overage for cuts and breakage

16 in
Standard stud spacing for built-in niche

Clean epoxy haze immediately

Stain-resistant epoxy prevents mildew and needs no annual sealing. Clean the haze with a specialized wash before this fast-hardening material cures permanently.

Budget & Layout Steps

1. **Calculate wall tile** Enter your exact wall dimensions to determine the large-format porcelain tile required.
2. **Calculate floor tile** Input your floor square footage to determine the matte mosaic tile count.
3. **Finalize the budget** Add your selected hardware, specialized edge trim pieces, and epoxy grout costs.
4. **Position the niche** Align the top and bottom of the niche opening precisely with the surrounding grout lines.

Select Your Tile Style

Find your row: **Your room features**

Your room features	Your pick	Why
Brushed brass hardware	Dark charcoal slate	Makes the metal pop beautifully
Low ceiling height	Vertical stacked white subway	Gives a height-enhancing modern twist
Earthy design plan	Glossy terracotta tiles	Brings natural warmth and texture

Essential Layout Checks

- ○ Check the drain location during your initial floor layout.
- ○ Pitch the niche bottom sill slightly downward so water runs off immediately.
- ○ Verify the recessed shelf fits neatly between studs without structural modifications.
- ○ Install thin brass metal edge trim for a crisp, modern outside corner.

Project Notes & Measurements

Enjoy your beautifully balanced, seamless new master bathroom shower!